
Ultrasonic Humidifier



INSTRUCTION MANUAL

Reed Instruction manual carefully before use

Function Declaration

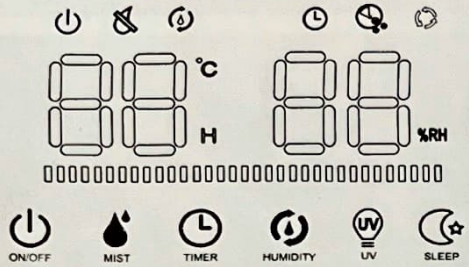

Function:

1.On/Off

First press to turn on machine, mist output will go into level 3 automatically, the room temperature and humidity will display. Press again to shut off the machine power.

2.Mist

Press it to choose the mist output from level 1- level 3 , mist step will be ligh tup on the screen.

3.Timer

Press it to set up the timer from 1-12 hours. it will be show in the screen. When time up, machine will turn off.

4.Humidity

Press it to adjust the humidity from 45%-95%, every press for 5%, when set up the humidity, the machine will be start and stop working automatically base with your set up.

5.UV


Touch this key in the working state of the machine to turn on or off the UV function, the display screen icon will be lit or turned off at the same time, and it is turned off by default when turned on.

6.Sleep

In the working state of the machine, tap this key to start the sleep function, turn off the screen switch icon half-lit, exit sleep with any key, and turn it off by default.

Note: When the water use out, machine will shut off the missing at once, fan will work 10s delay in order to spray all the mist out. In the mean while,b uzzer make 3 sound to remind the user to add water. After 15s, the machine will shut off, only left the water lack light bright up in red color in the screen.


Product Care

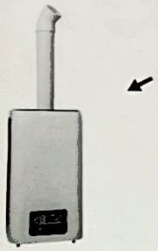


Before cleaning this product, you must unplug the power plug and stop working, otherwise it may be short-circuit or electric shock and other hazards.




Pls clean the water tank, water tank and atomizer regularlky

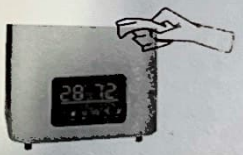


When clean the product and the proximity display panel, please use clean cloth to wipe. Prevent water from entering the interior of the product.

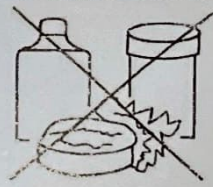

Do not use chemical detergents for cleaning

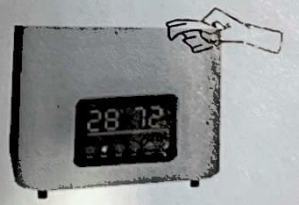

Do not use hard objects during cleaning, pls use a clean, soft clean.

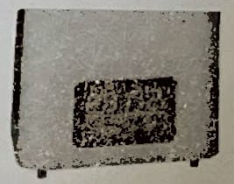

Pls always replace the water tank, keep the inside of the numidifier clean.

Product Care

1, weekly response to the electric water tank, sink, transducers, filters and other components for cleaning, unplug the power cord before cleaning.
2, use a soft cloth for routine cleaning of various components, routine cleaning is not clear if the scale tank, please use our production and supervision Kiyoyoshl Agent. Citric acid with 60 C hot water will melt, pour fouling place, soak for 5 minutes, then brush gently scrub fouling surface until removal of scale. (The ratio of water and citric acid IOmL: lg).
3, the filter from the tank to remove the knob. Clockwise and tighten. Counter-clockwise to loosen. Placed within the edible vinegar soak for 15 minutes, then Dozens hand jiggle under, and then rinse with clean water. After cleaning the filter with the new functionality is no different.
4, the electrical appliances when not in use for a long time, please dry clean after each part into the original container or placed in a dry place.
5, Do not use hard objects when cleaning to avoid scratching the transducer.
6, do feel free to use detergents clean the appliance, preferably with clean water clean.
7, do not use chemical solvents, gasoline, polishing powder substances to clean the machine surface.
8 Always replace the tank Chen Shui keep the humidifier clean.

Security Guide

1, please use the appliance - induced voltage and frequency: 220V — 50Hz.
2, the appliance please use a separate outlet. Do not disassemble the appliance repair renovation
3, this machine is for indoor use only
4, do not replace the power cord, there are anomalies immediately unplug the power cord, must by the manufacturer or repair or similarly qualified persons to repair.
5, cleaning or moving before you turn off the power and unplug the power cord.
6, do not flip the energized state and other electrical appliances to avoid burning the internal electronic components.
7, detergents and electrical work placement within the range of children can not touch.
8, do not work in the water tank and base separately, do not touch the water tank and components.
9, do not pull the power cord is unplugged or touch the power plug with wet hands.
10, the power cord Do not bend or severe stress.
11, a lightning storm or Unplug unused for long.
12, adults need to supervise children. Ensure that children do not play with the machine.

Precautions

1, the initial use of the appliance should be at room temperature for 30 minutes before rebooting.
2, the temperature is below 40 t, use clean water.
3, place on a flat sturdy place to avoid tilting
4, do not join in the water production of the Company, supervisory or allowed to join substances.
5, Do not use the Company's production, supervisory or allow the use of substances to clean the appliances.
6, place it in a place away from sources of heat, direct sunlight, and away from furniture and other home appliances 2 meters away, to avoid moisture.
7, do not spray nozzles are the electrical and electronic books and placed beneath towels and other items.
8, place at normal room temperature (temperature 5 C —40 C, relative humidity <80% RH).
9, at work, or when there is water in the sink Do not move the appliance.
10, clean, avoid electrical failures arising from the internal water.